

## **Utilities for USB Connected ExecuLabel and LabelManager Series Printers**

This utility includes the USB and printer drivers for the ExecuLabel LP350, LabelManager PC, LabelManager 400 and the LabelManager 450. In addition, an uninstall utility is included to assist in the removing of the USB drivers if necessary.

### **Installation Instructions:**

1. Download this file and save it to a specific location of your choice.
2. Once downloaded, access the file at that location and double-click on it. This will bring up the self-extracting utility allowing you to unzip the files.
3. Unzip these files to either the same location as the downloaded file, or to another folder that you specify.

### **Instructions for Uninstalling and Reinstalling the USB Drivers:**

1. Go to your **Printers** folder and double-click on the **DYMO LabelManager** icon.
2. Delete any print jobs that may be present, and then close the **Printers** folder.
3. Locate your **LWRemove** files and double-click on the **LWRemove.exe** application file.
  - Note: You will find these at the location you chose when you unzipped the utility file you previously downloaded
4. Unplug the USB cable from your computer and press **Continue**.
5. No matter what is shown in the box hit the **Select All** button and then **Remove**.
6. Once this is done, close the utility and restart your computer.
7. Once your computer has been fully restarted, reconnect the USB cable that you had previously disconnected and allow the **New Hardware Wizard** to start up and find your printer.
8. When asked how to find the software (drivers) you will need to specify the location and follow the on screen instructions to install the latest USB and printer drivers for your DYMO printer.
  - Note: This is the location you chose when you unzipped the utility file you previously downloaded.